

Airtight Tent AirBlock

Unfolding instruction

EN 01.2025

1. Take the tent out of the bag and lay it outflat on the ground, so that the tent legs are covered by the roof.



2. Screw the hose in the pump into the "OUT" hole.




3. On one of the legs there is a valve for pumping. If the spring in the valve is tight, you need to press it so that the spring is loose. Screw in the hose with the pump and start pumping. The pressure in the legs will make the spring tighten and block the air exit.



4. When the tent goes up, you should stand under the tent and lift up the place where the legs of the tent cross. When the tent is inflated disconnect the pump.



5. Attach the tent to the ground with all the attached tent pegs and ropes.

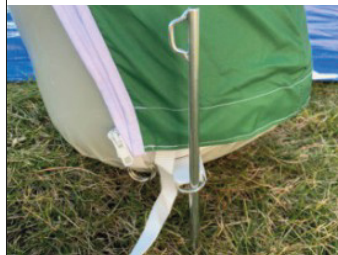

6. Then put on the walls of the tent, which you zip with two zippers starting at the bottom of the wall.



7. To assemble the tent, unscrew the valve and press down on the tight spring in the valve, so that the air begins to escape.



8. Screw the hose in the pump into the hole marked "IN".




9. Screw the pump into the valve and start sucking the air out of the tent's legs. Then roll up the tent and pack it into a carry bag.



Weights

In the case of sand weights in the shape of an ellipse, they are connected by ropes to the lashings on the roof.

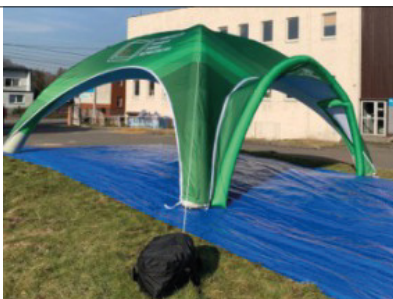

Weights in the shape of wheels are connected to the legs of the tent.



The period, conditions and terms of warranty of pneumatic products.

1. For each product, the Producer includes installation instructions.
2. The warranty covers: color fastness (UV resistance), changes in the structure of the knitted fabric (shrinkage, expansion) created during proper use, durability of sewing and fastening elements, durability of welds and tightness of the structure.
3. The warranty does not cover mechanical damage, damage caused by improper usage or failure to follow the Producer's recommendations.
4. The warranty does not cover changes resulting from natural wear and tear of the product.
5. Producent The producer guarantees that the product was made with the greatest care. In the case of finding any deficiencies, the Purchaser shall contact the Producer. The Producer will respond within 3 days. The Producer undertakes to remove the defect within 30 days from the date of acceptance of the complaint. The Producer shall extend the period of warranty benefits by a period corresponding to the period of repair.
6. The producer is not responsible for the assembly/disassembly of the product if it was done without following the instructions included with the product.
7. The producer provides a 24-month warranty on pneumatic products including all accessories.
8. The warranty does not cover damage caused by improper operation and resulting from random circumstances, fire, hurricane, acts of vandalism.
9. The producer has the right to make changes to the above information.
10. In matters not regulated by these terms and conditions, the regulations of July 27, 2002 shall apply. On specific terms and conditions of consumer sales and amendments to the Civil Code (Dz. U. Z 2002 r. Nr 141 , poz. 1176, z 2004 r. Nr 96, poz. 959).

Recommendations for the use and maintenance of pneumatic products.

1. The product should be fixed to the substrate with all the supplied tracks and anchors, and in the case of installation on a hard surface, attached with all the sand or iron weights supplied by the Producer.
2. The advertising product can be used depending on how it is fixed to the ground:
 - in winds up to 50 km/h when fixed to the ground with pins/anchors
 - in winds up to 40 km/h when fixed to the ground with sand or iron weights.
3. In case of increasing blasts of wind, the product should be immediately folded, so that it is not affected damage.

Do not fold and store the product wet, as there may be the appearance of mold on the product.

Wet product should be immediately unfolded to dry in a dry place. Any traces of mold will not be subject to the terms of the warranty.

4. Any dirt on the fabric should be removed immediately after soiling with a damp cloth and warm water without additional detergents. The producer allows cleaning with high-pressure washers. The distance of the water jet min. 50 cm.
5. Do not make any repairs on your own without the agreement of the Producer. In case of mechanical damage to the product, or as a result of strong wind, the product must be return to the Producer for repair to prevent further damage.