

Infrared heater INFRA2000 + PRO IP65 EN 1.2026

Assembly instructions

INFRA2000 + PRO IP65 is an infrared radiator with functionality extension. It has the option of adjusting the heating power through a remote control. It has a setting of three power levels: 33%, 66% and 100% heating power (i.e. heating with 700 W, 1500 W and 2000 W).

⚠ Attention!

- Please remove all packing material before turning the radiation on for the first time.
- For the operation of the 2000 W heater it is recommended to designate a line with a separate 16A type "C".
- The infrared heater has a high inrush current, the fuse may blow out if the [A] fuses are too small.
- Two radiators (2000W each) cannot be connected to one cable, 16A type "C" is for maximum of 3680 Watt, 230 V 50 Hz.
- It is necessary to keep safe distance between objects and the radiator when put to use.

Minimum distance from the top (from ceilings or other materials): 25 cm (9.8 in)

Minimum distance from the sides (from walls or other materials): 1 m (39 in)

Minimum distance from the floor or other material in the direction of heat emission: 1.50 m (59 in)


Please read carefully before switching on: The INFRA2000 + PRO is a high-quality infrared heater with shortwave infrared (IR A) technology, equipped with high-performance gold-plated Helen heating pipes. This device is waterproof in protection class IP65 and therefore intended for indoor and outdoor use. The device is ready to be connected using the supplied 3m electric cable with a plug. The set also includes a mounting bracket, as pictured above, for easy mount on a parasol rib. This device works in a high protection class 1 shielding, it is recommended to use 16A type "C" fuse for proper and safe work. The device works in accordance with the European voltage standard 230V 50Hz (phase, neutral and earthing).

⚠ Warning!





Do not leave any flammable materials or gases within 1.5 m from the device. Do not try to open/repair the heater yourself. Never touch a turned on (and also immediately after turning off) filament or aluminum housing.

Contents of the pack

- 1 - mounting screws 2 pcs.
- 2 - washers 2 pcs.
- 3 - mounting element 1 pc.
- 4 - radiator 1 pc.
- 5 - remote control 1 pc.

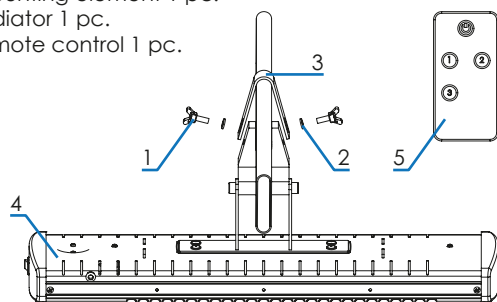

Example of proper mount on the umbrella rib

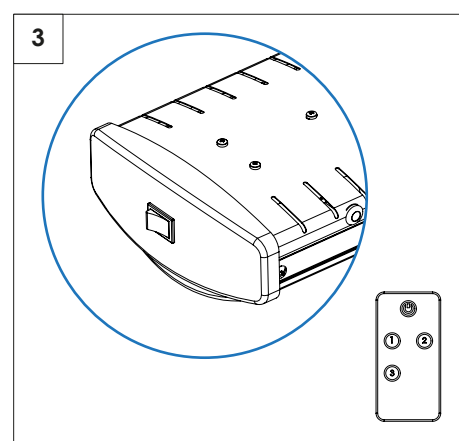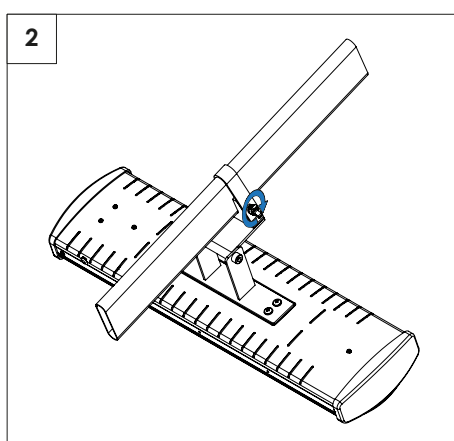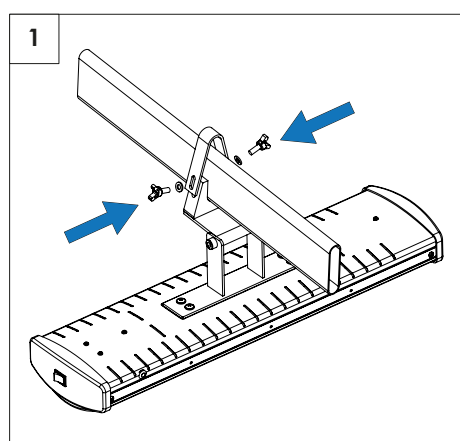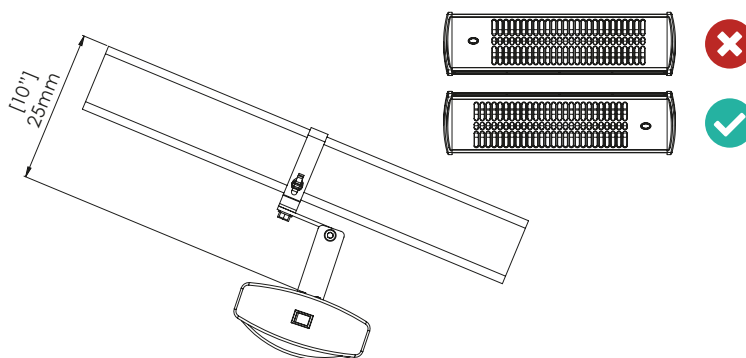

1. Place the heater in its final position and prepare to screw to the mounting element (3) with the screws (1) and washers (2).
2. Screw the radiator hanging on the mounting element until the screws stop.
3. To operate radiator use the switch (I - on, O - off) or attached remote control. To unmount switch off and reverse the steps.